




Remove the Screen

Written By: Melissa

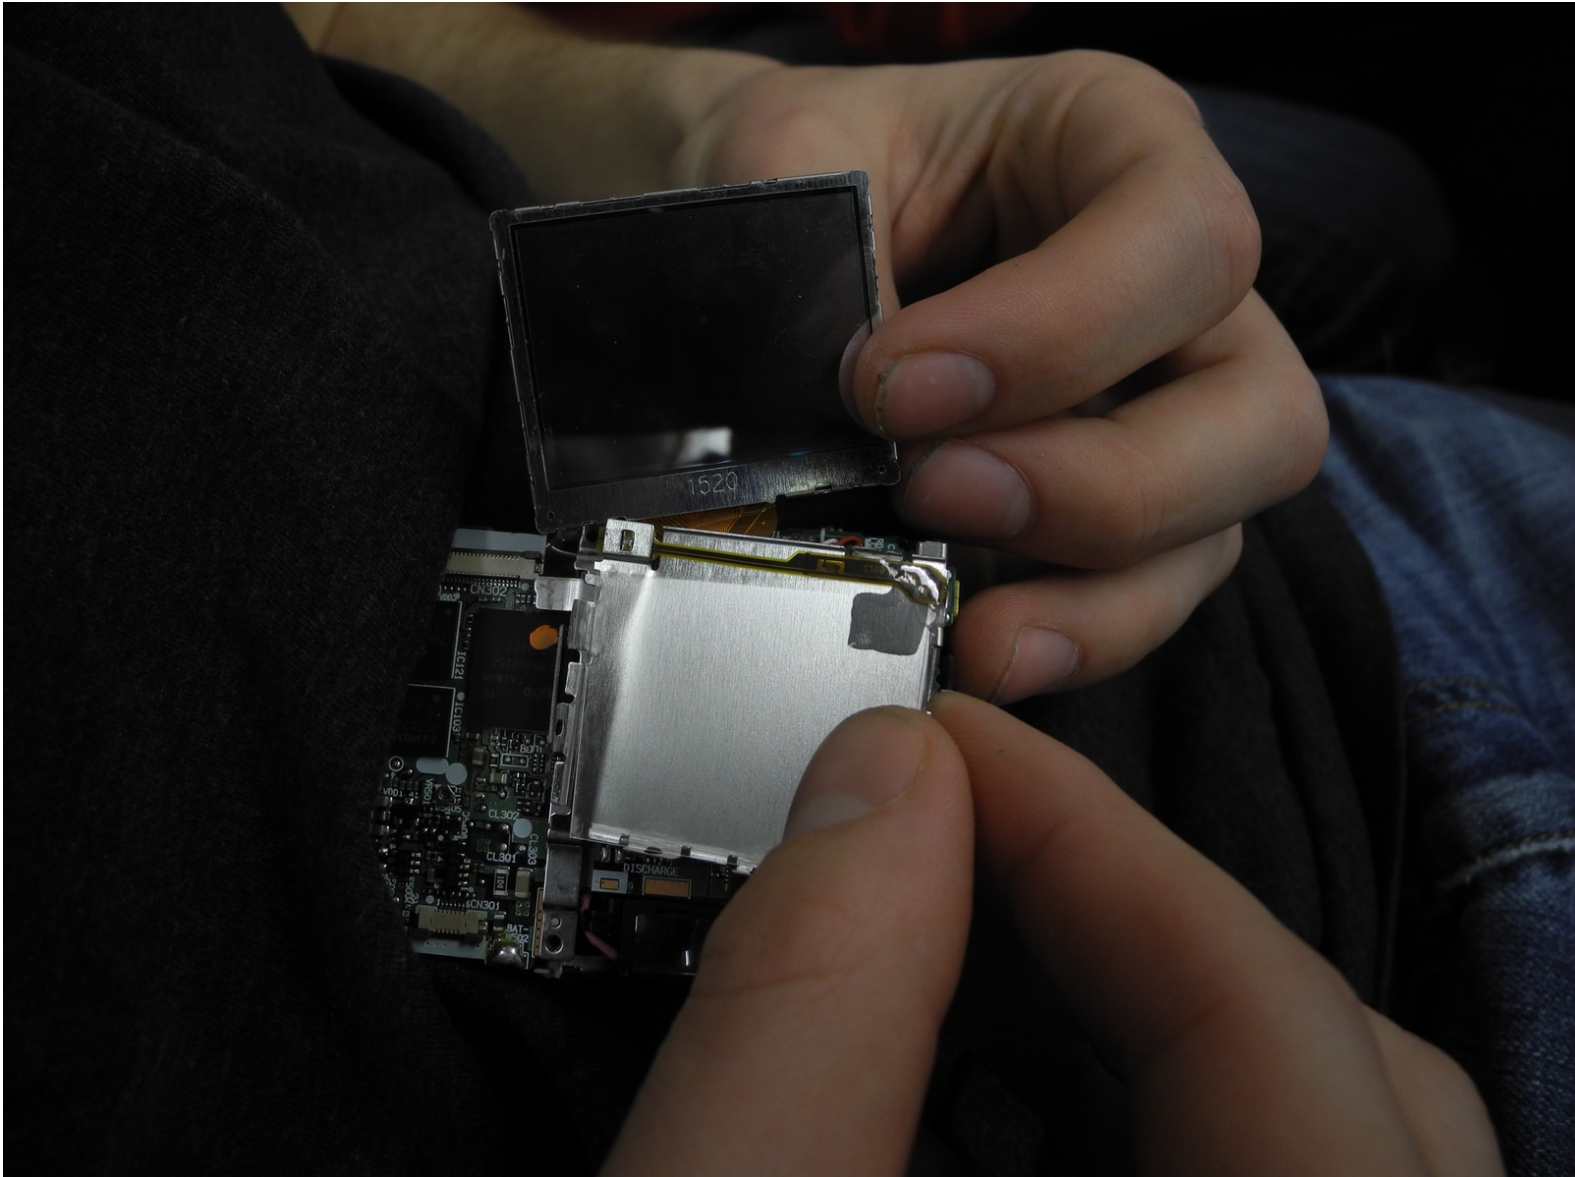




TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remove Back of camera

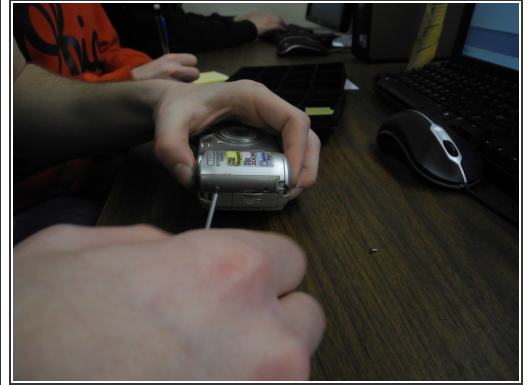


- Remove the screws from the bottom, right, and left side of camera.

Step 2




- Remove the back of the camera, may require force.

Step 3 — Screen Bracket

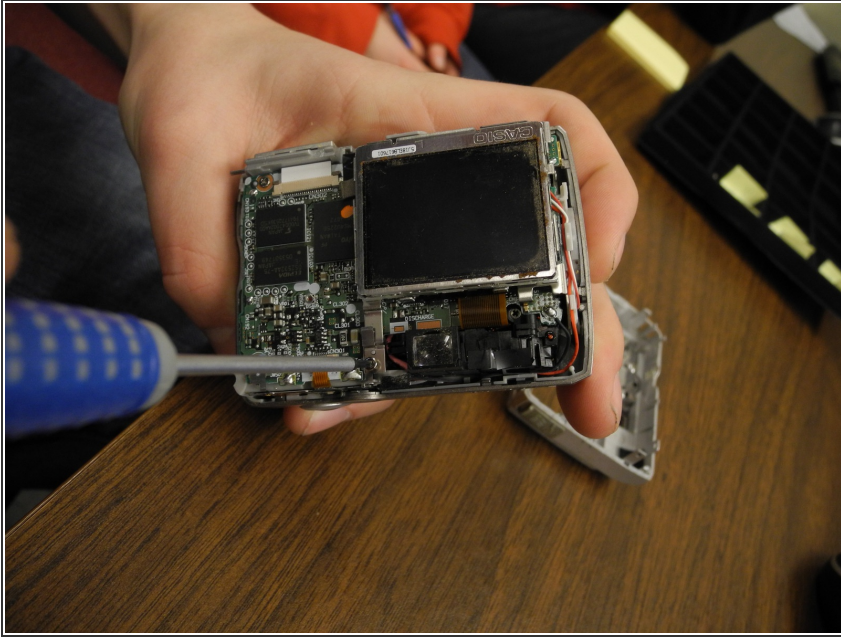


- Unscrew the right metal bracket of the viewing lens

Step 4 — Remove front of camera

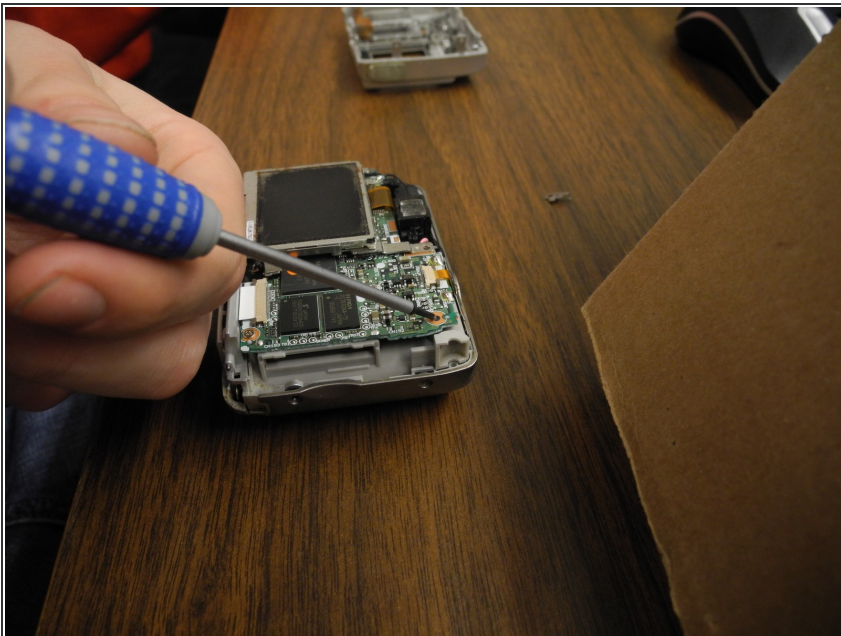

- Unscrew the top right corner screw

Step 5

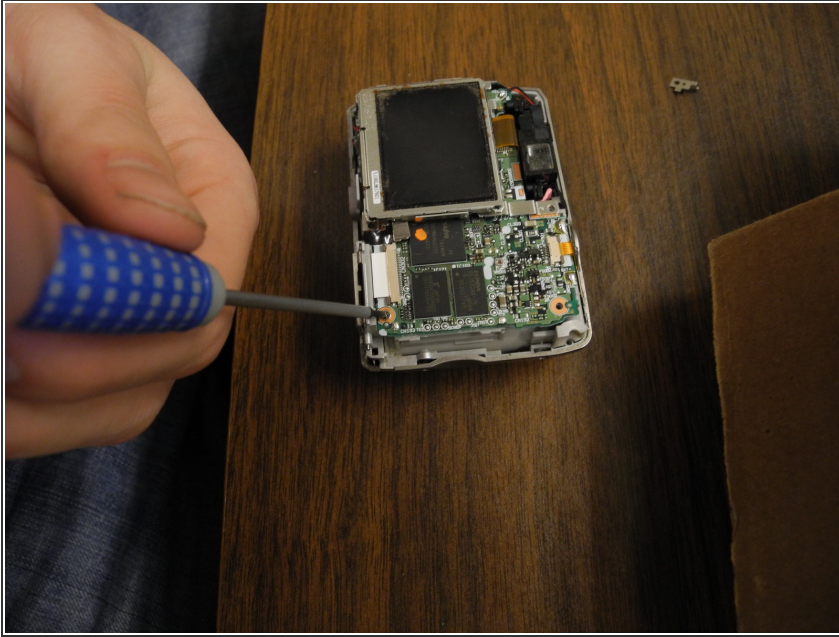


- Unscrew the bottom right corner screw.

Step 6




- Pull the grey circular facet that sits on the bottom outside of the camera off - may have to use force.

Step 7

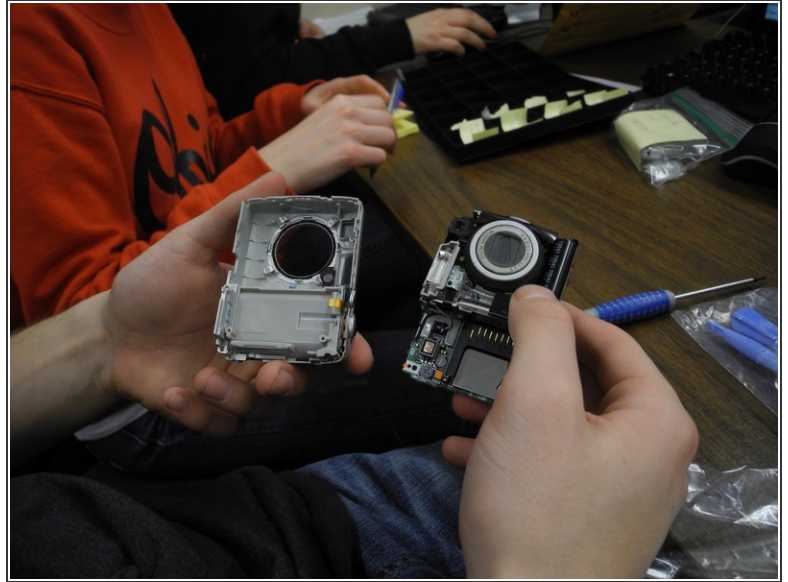


- Pull the front of the camera off of the mother board.

Step 8 — Remove the Screen

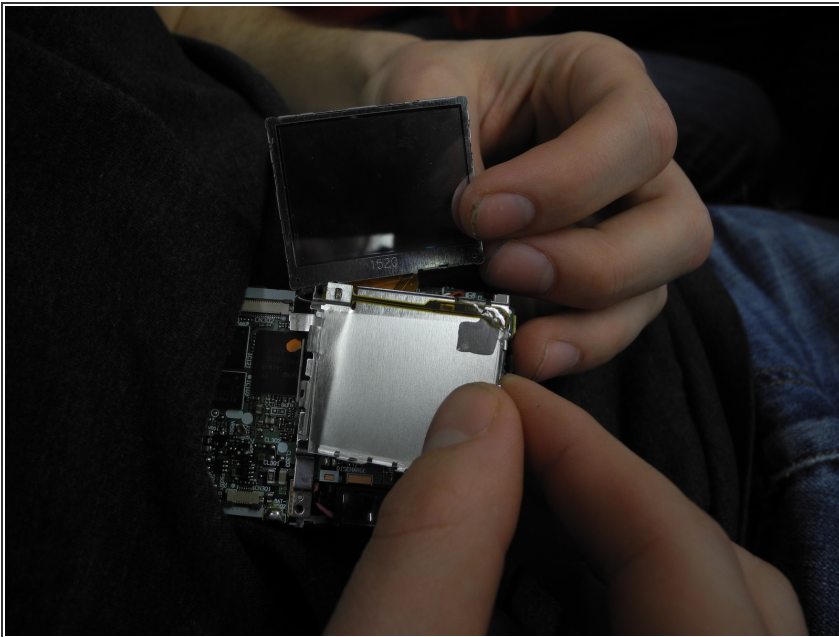


- Unhinge the outer case of the screen from the back of the camera. The screen should still be hanging by wires.

Step 9

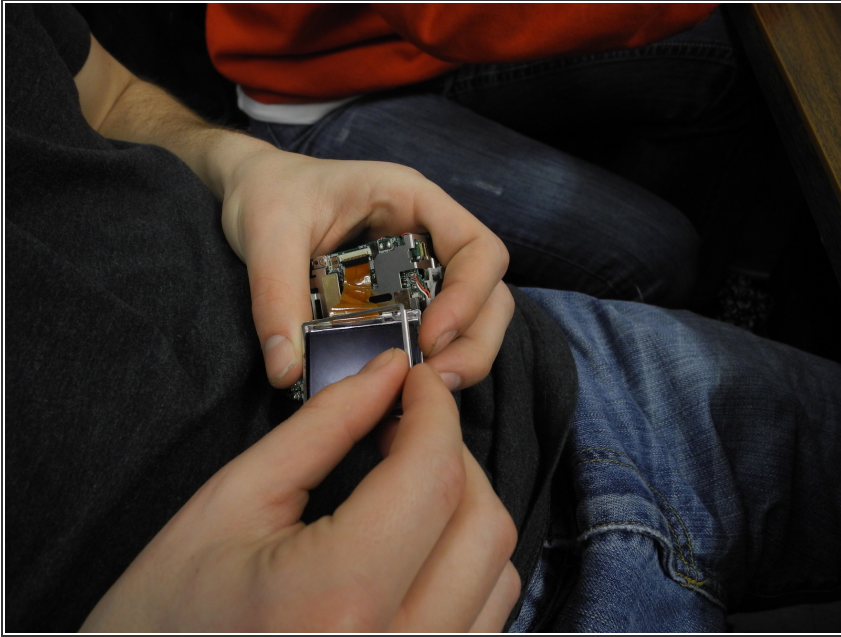


- Remove outer case/rim of screen from the back of the camera. The screen should still be hanging by the red wire and white wire.

Step 10

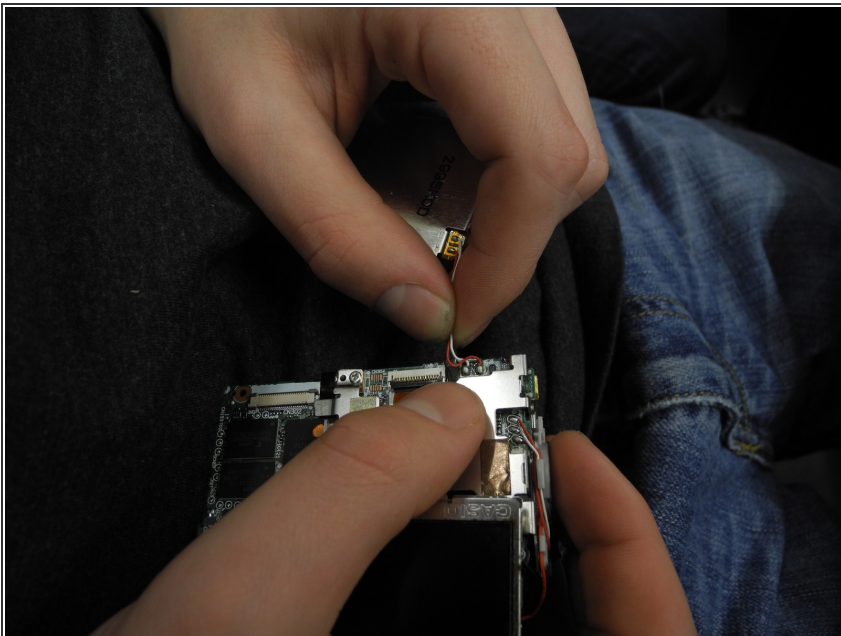

- Pull out the red wire and white wire attaching the screen to the motherboard.

Step 11

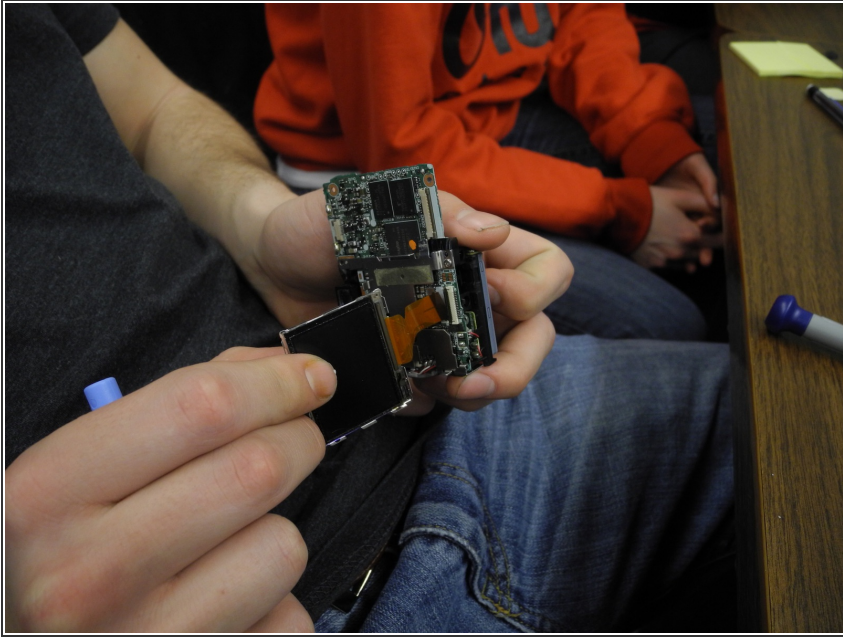

- Flip up black lever holding data cable to motherboard, and remove data cable from motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:44:03 PM.